


Torsion Bar Rule Illustration UKRRA 2016

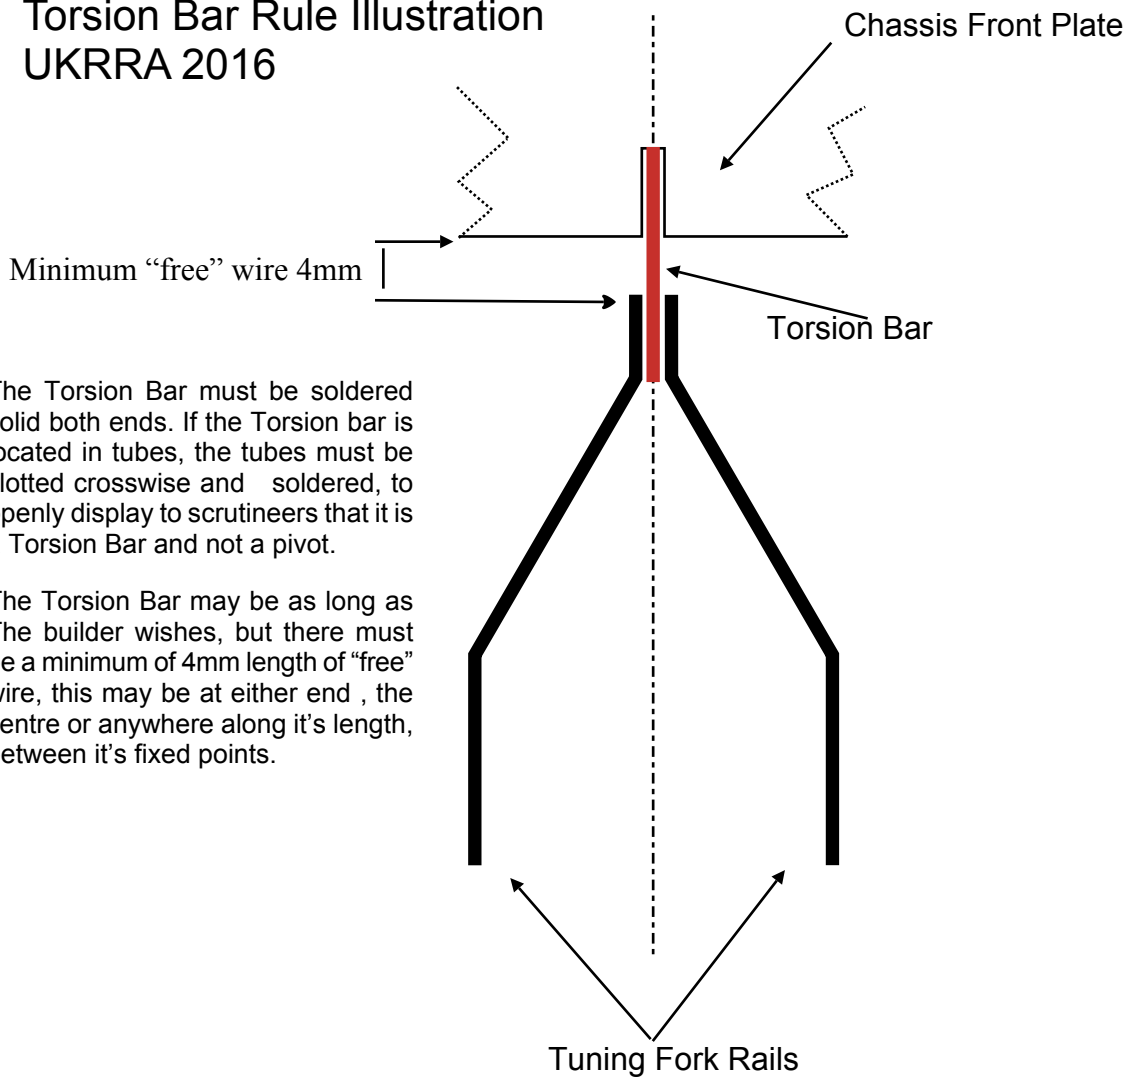

The Torsion Bar must be soldered solid both ends. If the Torsion bar is located in tubes, the tubes must be slotted crosswise and soldered, to openly display to scrutineers that it is a Torsion Bar and not a pivot.

The Torsion Bar may be as long as The builder wishes, but there must be a minimum of 4mm length of "free" wire, this may be at either end , the centre or anywhere along it's length, between it's fixed points.